
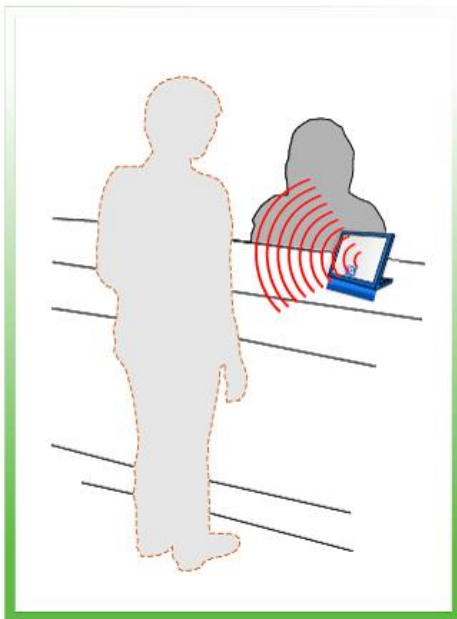


Self-contained, Rechargeable, Portable Audio Frequency Induction Loop System

Description and Features:

The **PortaLOOP – 3** is a freestanding, rechargeable audio induction loop system designed to provide ‘one to one’ or ‘many to one’ telecoil compatible assistive listening where a fixed loop installation is undesirable or impracticable.

The **PortaLOOP – 3** system utilizes “Green” Nickel-metal hydride batteries and has a typical per charge operating time more than 18hrs (up to 24hrs under optimal conditions). The recharge cycle time is a short 2 hours, at which point the intelligent charging system will switch to a maintenance, trickle charge ensuring the unit will always be ready for use.

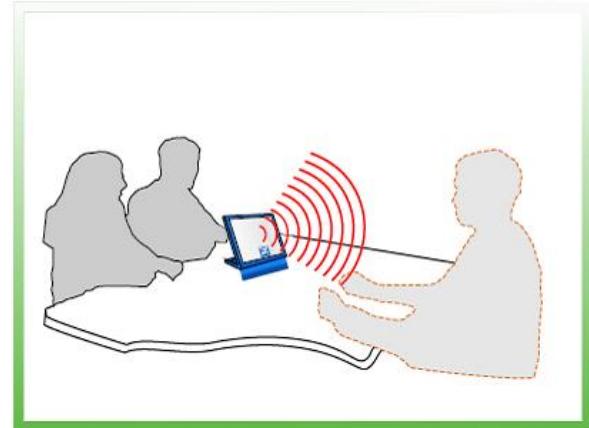

The unit’s front panel incorporates a blue “activity” LED which affirms to the customer that the unit is active. This LED also draws their attention to the unit, encouraging them to turn their hearing aid into the “T” position for better communication.

The rear panel incorporates a green power indication LED and a second blue “activity” LED confirming the unit’s operating status to the staff member.

Where a company wishes to highlight its “hearing loss outreach”, the panel on the front of the unit can be imprinted with a custom message, for example a company logo, promotional advertisement or simply an attractive image or photo to increase the unit’s “presence” and utility.

For large “custom” orders even the unit’s case can be colour coordinated to match your corporate identity or to make the unit better compliment its surroundings.

Automatic ‘power off’ feature after 20 mins to conserve battery life.

Technical Data:

<i>Dimensions:</i>	250mm x 200mm x 100mm
<i>Weight:</i>	752g
<i>Charger:</i>	12VDC Switch Mode 100/240VAC
<i>Battery Type:</i>	12V, 2AH NiMH
<i>Operation Time:</i>	24hr subject to level of usage
<i>Charging Time:</i>	Unit may be charged in under 2hrs at which stage the unit will continue to be trickle charged
<i>Loop Coverage:</i>	1.2 metres
<i>Indicators:</i>	Power (green) x 1, Loop Activity (blue) x 2
<i>Aux Input:</i>	External Microphone
<i>Operating Temperature:</i>	0°C to 45°C
<i>Material:</i>	ABS Plastic



Typical Applications:

- ✦ Office Reception Desks
- ✦ Ticket and other service counters
- ✦ Personal offices/work stations of hard of hearing employees
- ✦ One on one senior aide home visits
- ✦ Interview rooms
- ✦ Small meeting/conference rooms